
Ultra-Low-Noise Current Amplifier

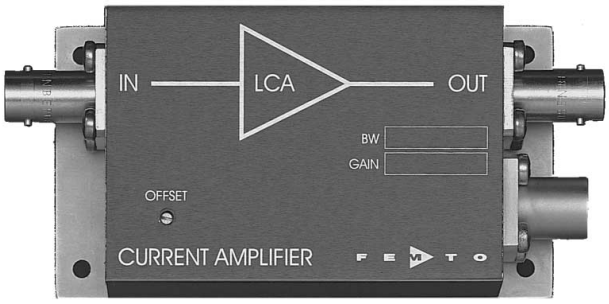

Features	• **Bandwidth and Frequency Response independent of Detector-Capacitance (up to 10 nF)** • **Extremely Low Noise, 3 fA/√Hz equivalent Input Noise Current** • **Bandwidth DC ... 1 kHz** • **Transimpedance (Gain) 5 x 10^9 V/A**	
Applications	• **Photodiode- and Photomultiplier-Amplifier** • **Spectroscopy** • **Charge-Amplifier** • **Ionisation Detectors** • **Preamplifier for Lock-Ins, A/D-Converters, etc.**	
Specifications	*Test Conditions*	*Vs = ± 15 V, Ta = 25°C*
Gain	Transimpedance	5 x 10^9 V/A (>10 kΩ Load)
	Accuracy	±1 %
Frequency Response	Lower Cut-Off Frequency	DC
	Upper Cut-Off Frequency	1 kHz (- 3 dB)
	Rise- / Fall-Time	400 µs (10% - 90%)
	Gain Flatness	± 0.1 dB
Input	Equ. Input Noise Current	3 fA/√Hz (@ 100 Hz)
	Equ. Input Noise Voltage	8 nV/√Hz (@ 100 Hz)
	Input Bias Current	5 pA typ.
	Input Bias Current Drift	Factor 2.3 / 10 K
	Offset Current Compensation	± 450 pA, adjustable by Offset-Trimpot
	Max. Input Current	± 2 nA (linear Amplification)
	Input Offset Voltage	< 1 mV
	DC Input Impedance	50 Ω (virtual) // 5 pF
Output	Output Voltage	± 10 V (>10 kΩ Load)
	Output Impedance	50 Ω
Power Supply	Supply Voltage	± 15 V
	Supply Current	± 55 mA typ.
Case	Weight	210 gr. (0.5 lbs)
	Material	AlMg4.5Mn, nickel-plated
Temperature Range	Storage Temperature	-40 ... +100 °C
	Operating Temperature	0 ... +60 °C
Absolute Maximum Ratings	Input Voltage	± 7 V
	Power Supply Voltage	± 22 V

Ultra-Low-Noise Current Amplifier

Connectors	Input	BNC
	Output	BNC
	Power Supply	LEMO Series 1S, 3-pin fixed Socket Pin 1: + 15V Pin 2: - 15V Pin 3: GND

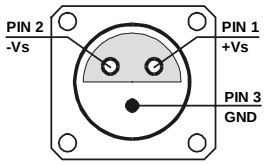


Photo Detector Biasing in Photovoltaic Mode:
Use for Low Speed Applications and minimum Dark Current.



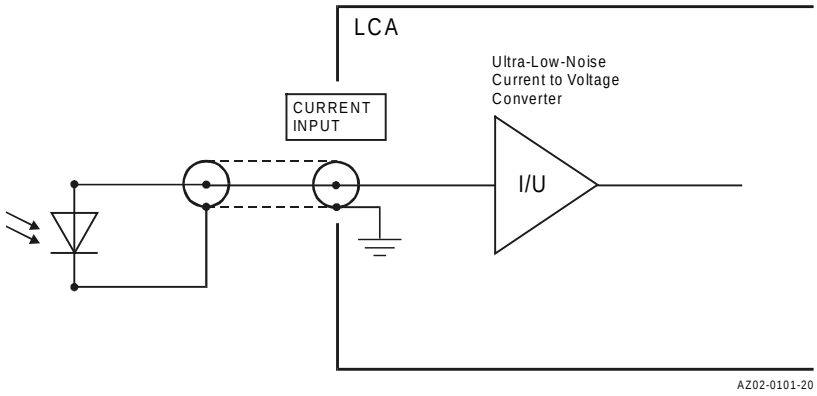


Photo Detector Biasing in Photoconductive Mode:
Use for Fast Applications and if more Dark Current is tolerable.
Bias Voltage decreases Detector Capacitance.

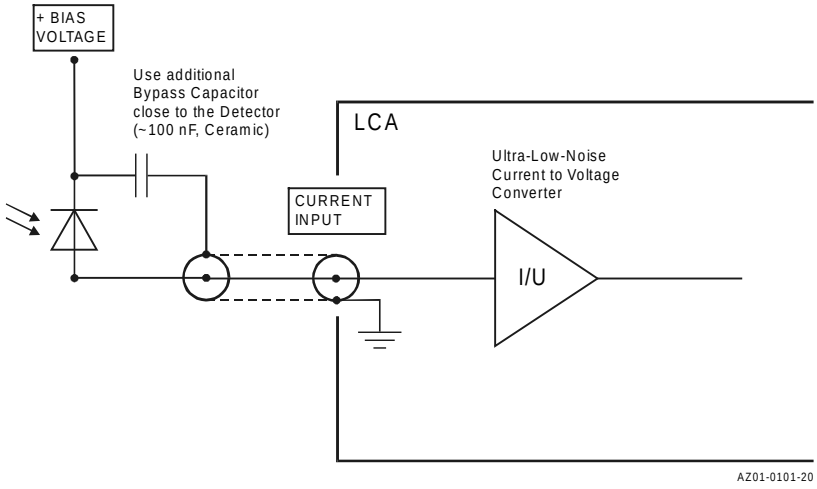

Ultra-Low-Noise Current Amplifier

Dimensions

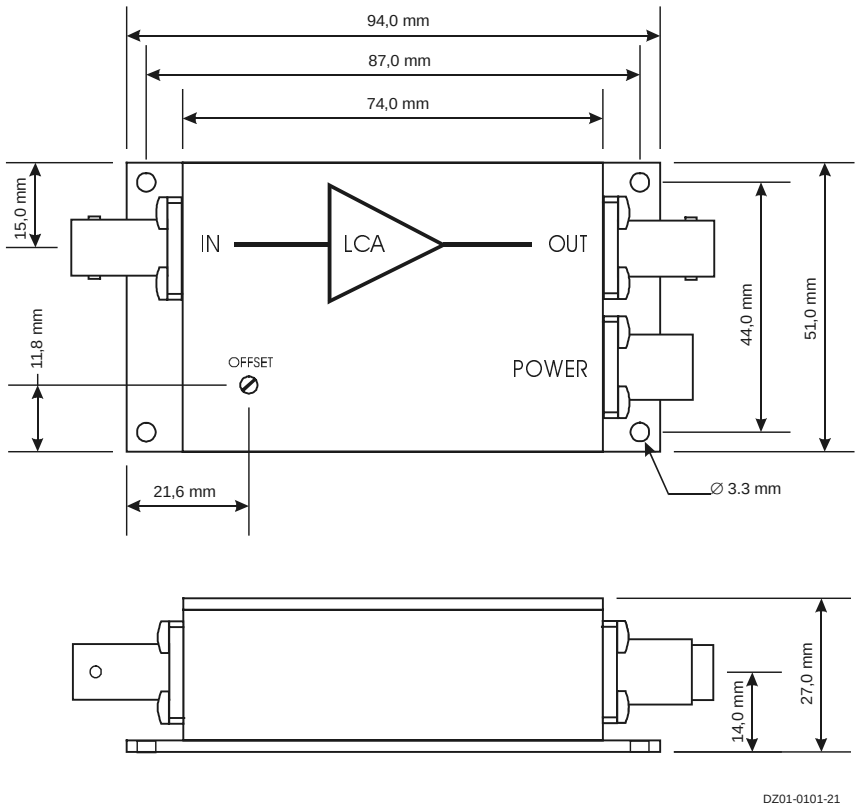

FEMTO Messtechnik GmbH
Paul-Lincke-Ufer 34
D-10999 Berlin · Germany
Tel.: +49 (0)30 – 4 46 93 86
Fax: +49 (0)30 – 4 46 93 88
e-mail: info@femto.de
http://www.femto.de

Specifications are subject to change without notice. Information furnished herin is believed to be accurate and reliable. However, no responsibility is assumed by FEMTO Messtechnik GmbH for its use, nor for any infringement of patents or ather rights granted by implication or otherwise under any patent rights of FEMTO Messtechnik GmbH. Product names mentioned may also be trademarks used here for identification purposes only.
© by FEMTO Messtechnik GmbH
Printed in Germany